


BIOTEC Wall Mount Installation Instructions

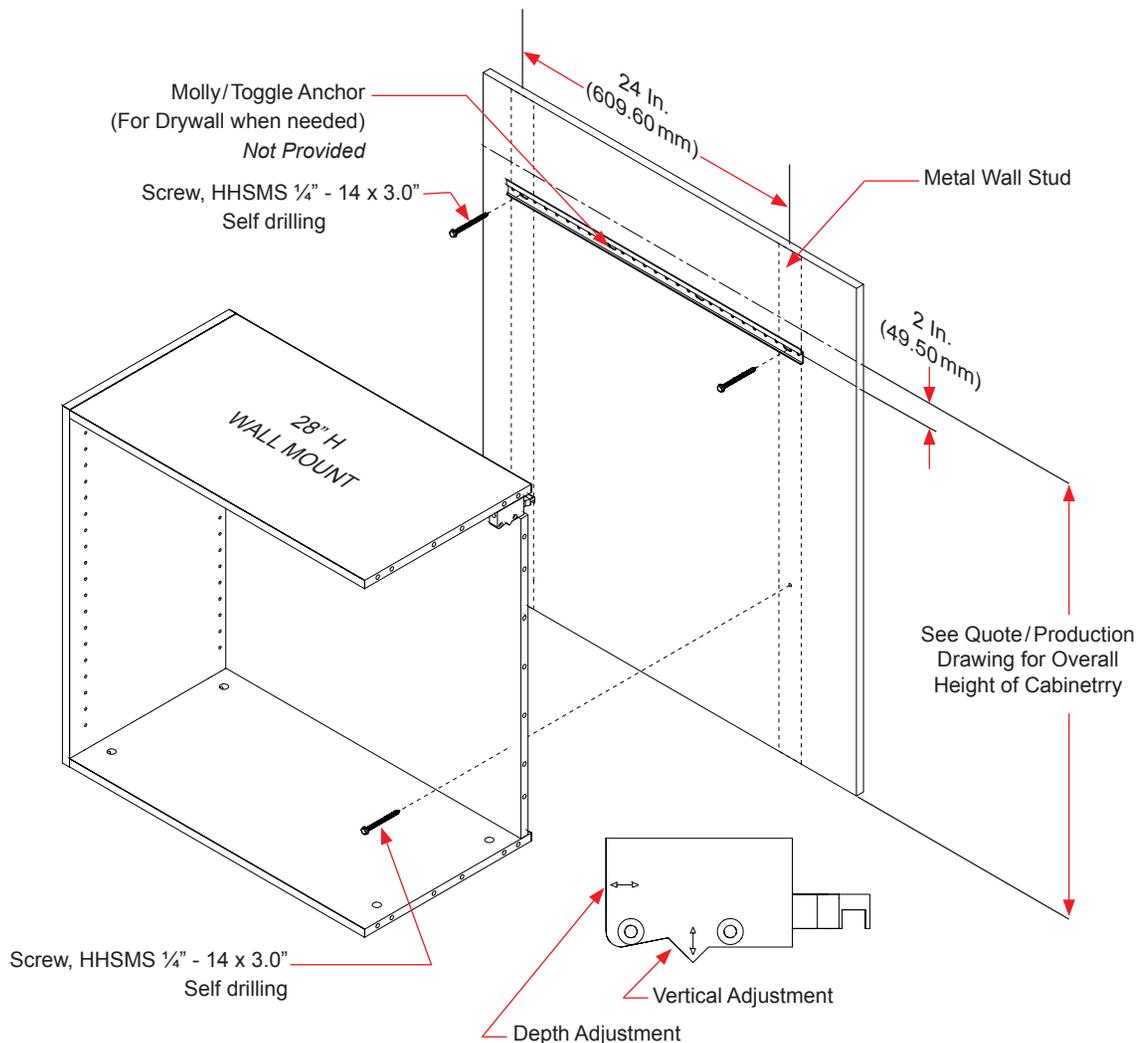

1. Determine where the Wall Mount Cabinet is to be located on the wall.
2. Remove the doors and any shelving in the cabinet to make install easier.
3. Mark the wall with vertical lines to indicate the extreme outside of the cabinets.
4. Mark the wall with a horizontal line to indicate the rail position on the wall. This line must be level to ensure a proper installation. Reference the quote or acknowledgement drawing for an overall height of the products. The line indicating the center of the rail should be 2.0" below the top of the cabinets.
5. Locate the studs in the wall and determine center-to-center distance.
6. Position the rail so that the edge is 3/4" from the left vertical line that indicates the left outside of the wall mount cabinet. If the left end panel is a non-finished end then the rail may extend beyond the vertical line. The rail will need to be cut to length. Make sure the end of the rail is as close to a stud as possible.
7. Fasteners are provided for mounting, the #14 x 3.0" long screws are for mounting to wood or steel studs. No pilot hole is required for the #14 x 3.0" screws. Use a self-drilling toggle bolt (not provided) to anchor the rail when no wall stud is present.
8. Fasten the rail to the wall. It is important that the rail remain relatively straight, use wood shims as necessary between the rail and wall to keep the rail straight.
9. Hang the wall mount cabinets on the rail. Make sure the hooks on the back of the cabinet engage the rail. Connect the cabinets together with connecting screws provided. Drill a 1/4" diameter hole thru the back panel, 3.0" up from the bottom of the cabinet into a wall stud. Install the #14 x 3.0" hex head screw thru the back panel into the wall stud. Do this wherever a stud is available behind the cabinet.
10. Reinstall the shelving and doors